


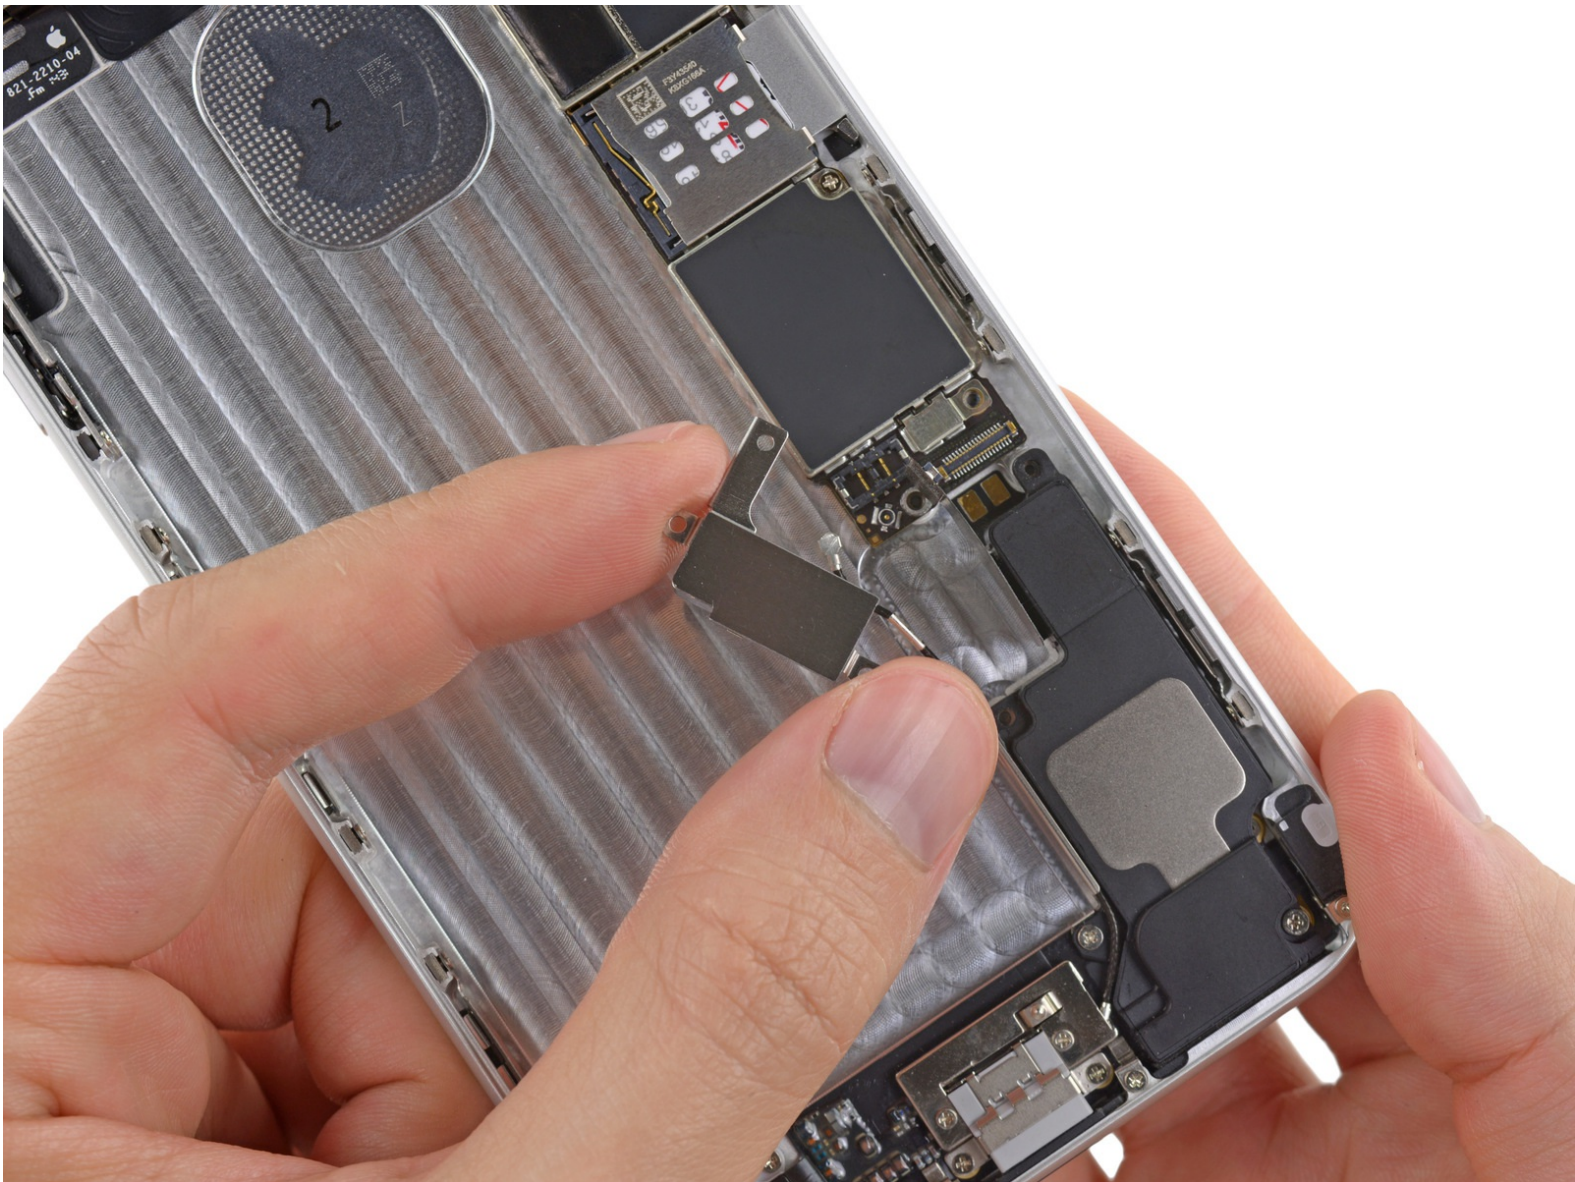

# iPhone 6 Plus Vibrator Replacement

Prereq only, battery removed.

Written By: Walter Galan



## INTRODUCTION

Prereq only, battery removed.

---




### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
-



## Step 1 — Vibrator

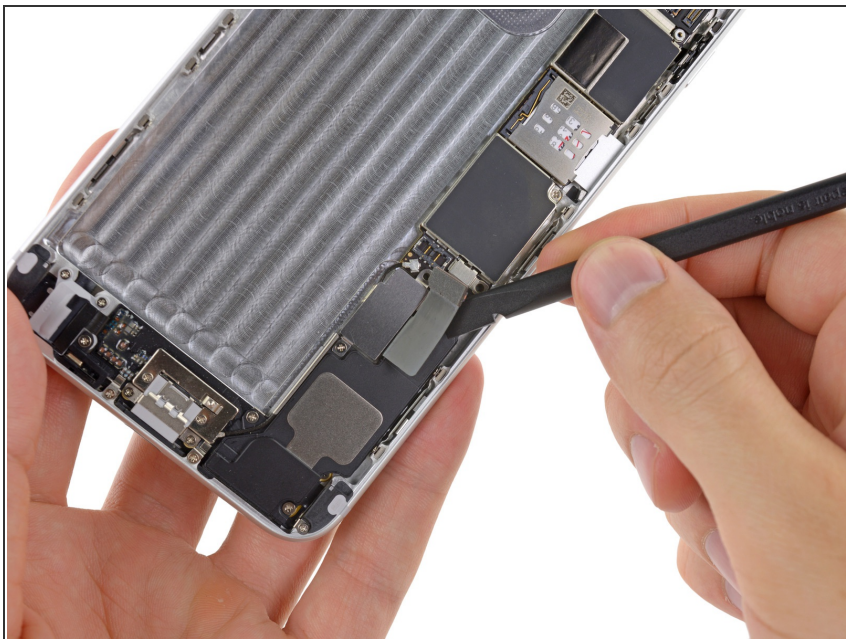


- Pry the vibrator connector cable up from its socket on the logic board with the flat end of a spudger.

## Step 2




- Use the tip of a spudger to disconnect the interconnect antenna cable from its socket on the logic board.

## Step 3

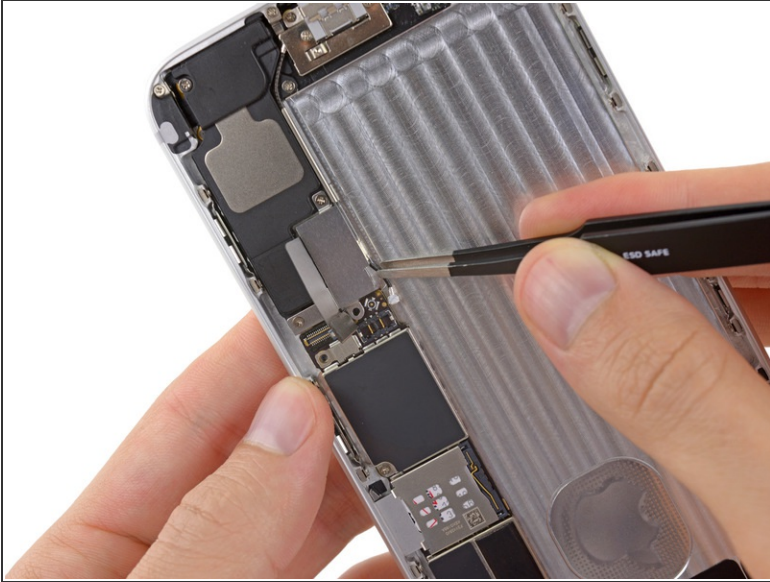

- Grasp the interconnect antenna cable with a pair of tweezers and carefully deroute it from its channel on the speaker assembly.


## Step 4

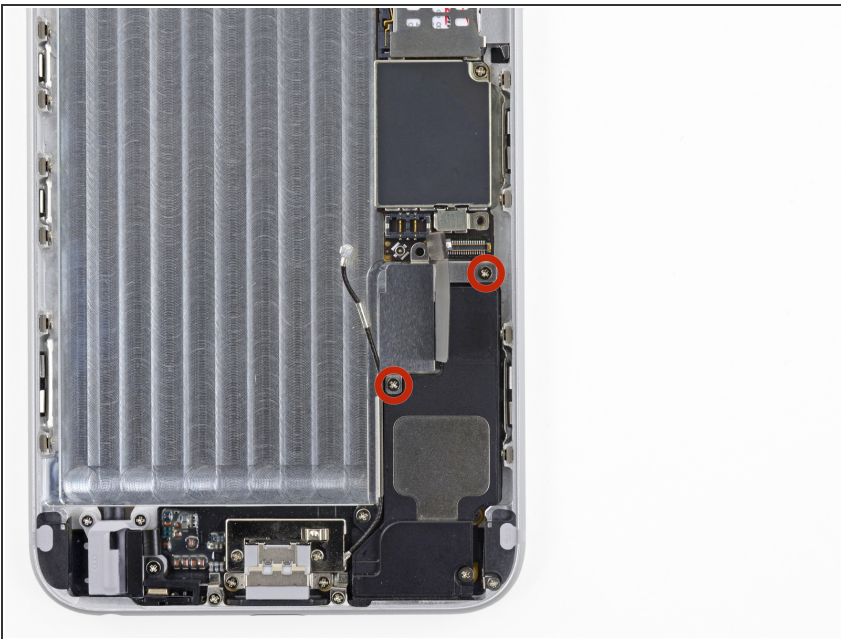

- Remove the two 2.5 mm Phillips #00 screws securing the vibrator to the rear case.



## Step 5

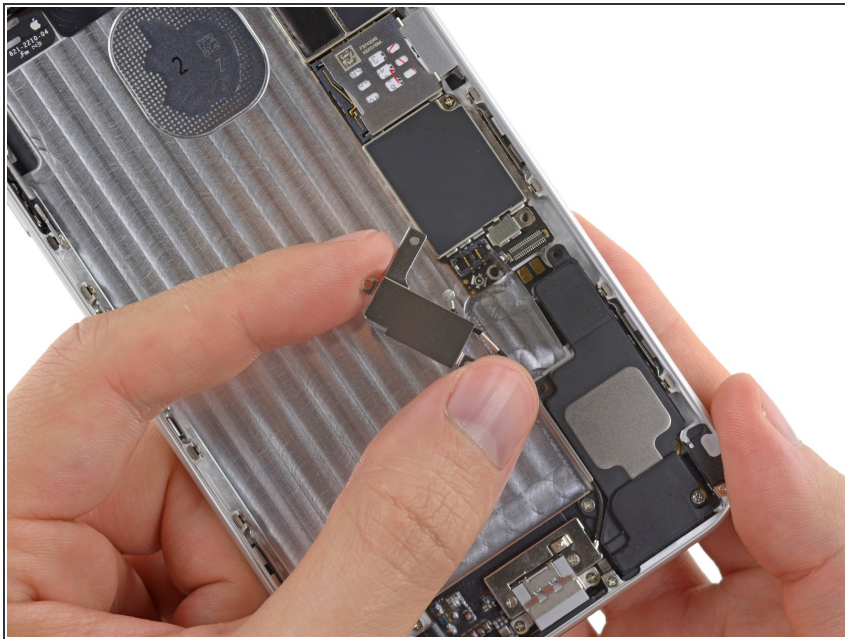

- Lift and remove the vibrator out of the iPhone.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-28 08:59:22 PM.